

## BMW F850GS ADVENTURE '19-

### M O U N T I N G I N S T R U C T I O N S

REF 3594

PROTECTOR DE FARO / HEADLIGHT PROTECTOR




1 Person





15 min



EASY

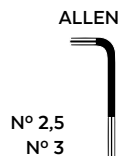

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Protector de faro policarbonato	Polycarbonate protector	1	3594WM3
2		Soporte metálico derecho ( R )	Right metal support ( R )	1	SOPOR2P1-R-3594
3		Soporte metálico izquierdo ( L )	Left metal support ( L )	1	SOPOR2P1-L-3594
4		Tornillo ISO 7380 M4x8 (Negro)	M4x8 ISO7380 allen screw (Black)	4	TORNI-I7380-757
5		Arandela de nylon M4	M4 nylon washer	4	ARNV00000000311
6		Tornillo allen M5X40 Ø11 ISO7380	M5X40 Ø11 Allen screw	2	TORNI-I7380-774
7		Casquillo Ø8,5x Ø13 x15	Ø8,5x Ø13 x15 bush	2	CASQUI-M----614


# BMW F850GS ADVENTURE '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**


**DISASSEMBLY  
DESMONTAJE**

**A** Tornillería original  
Original screw

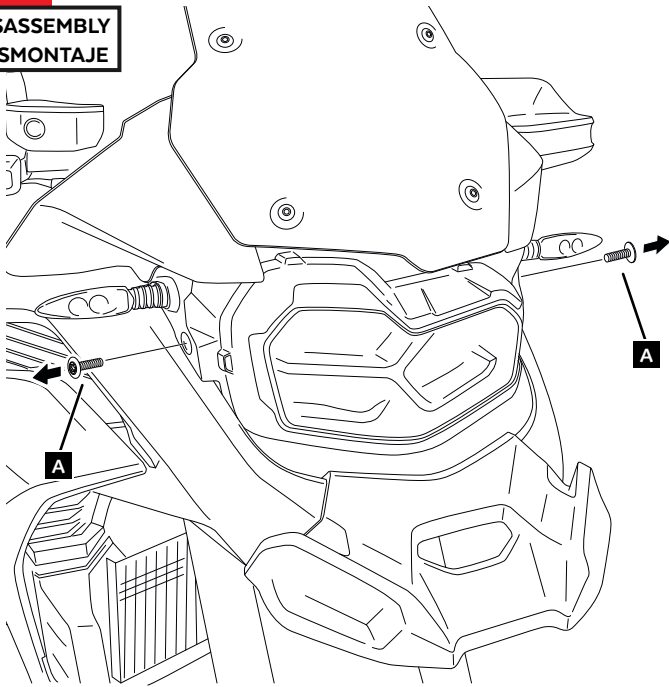


**2**

**ASSEMBLY  
MONTAJE**

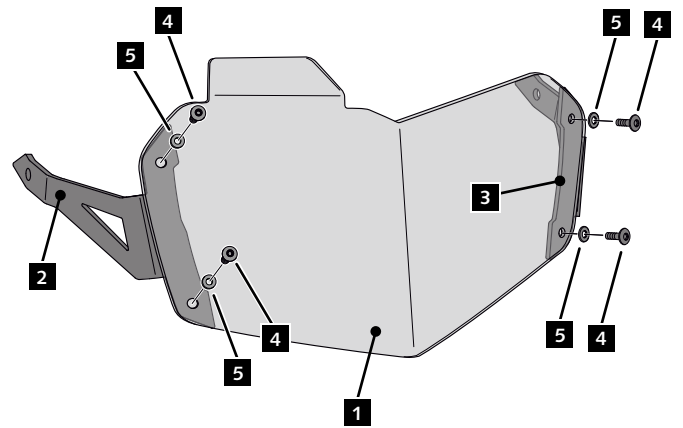

**3**

**ASSEMBLY  
MONTAJE**

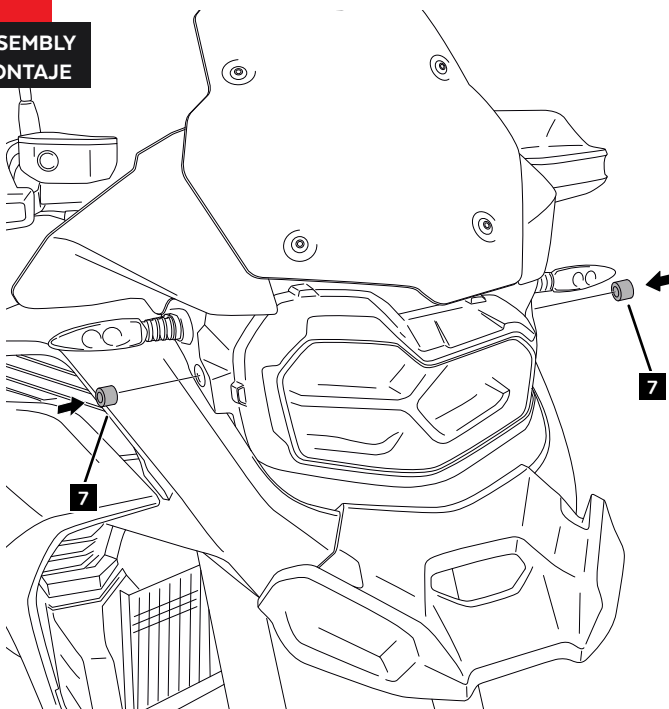

**4**

**ASSEMBLY  
MONTAJE**

